



GPS Tracker - GPER – Manual scripts


LED Status 1.

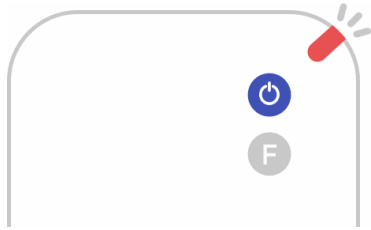

Switch on:
Press and hold the Power button.
LED flashes in Red.

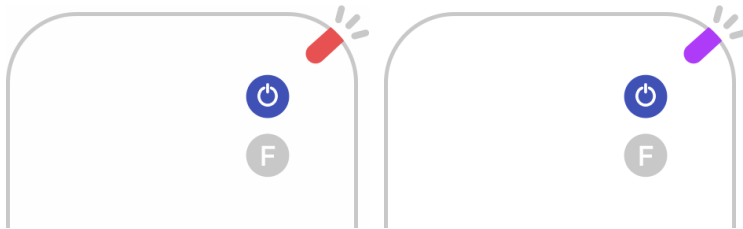


Switch off:
Press and hold the Power button.
LED flashes in Red & Purple.

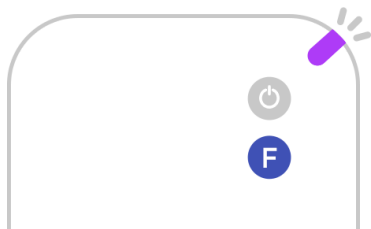


Check the Power:
Press F button.
If there is a battery, LED flashes in Purple.


LED Status 2.

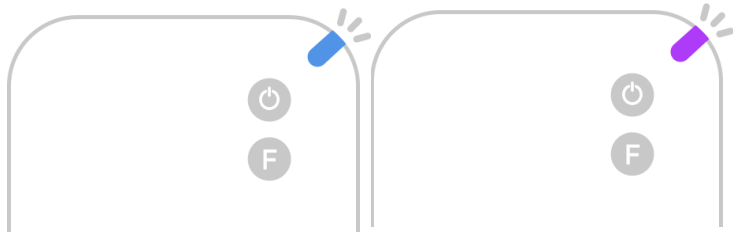

Charging:
Connect the charger.
LED flashes in BLUE & PURPLE.
(Fully charged: LED flashes in PURPLE)

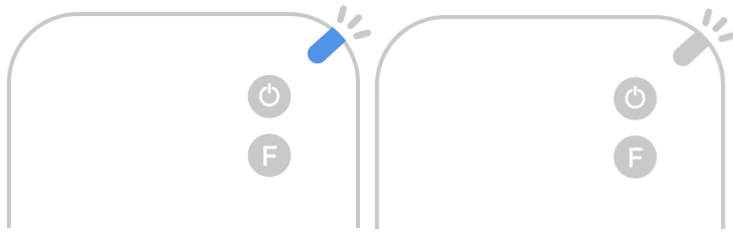


GPS Transmission Failed :
LED flashes in BLUE for 5seconds.

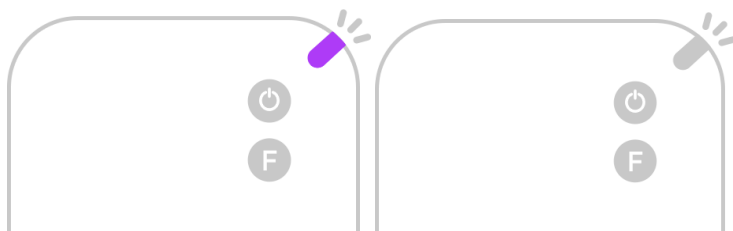

LoRa Failed:
LED flashes in PURPLE for 5seconds.

LED Status 3.

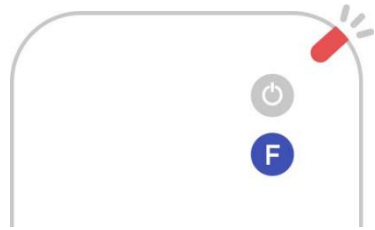


SOS
: Press and Hold F Button.
LED flashes in RED for 5seconds.


Registering Gper on FAMY 1.



Run FAMY App
[To register Gper] Click



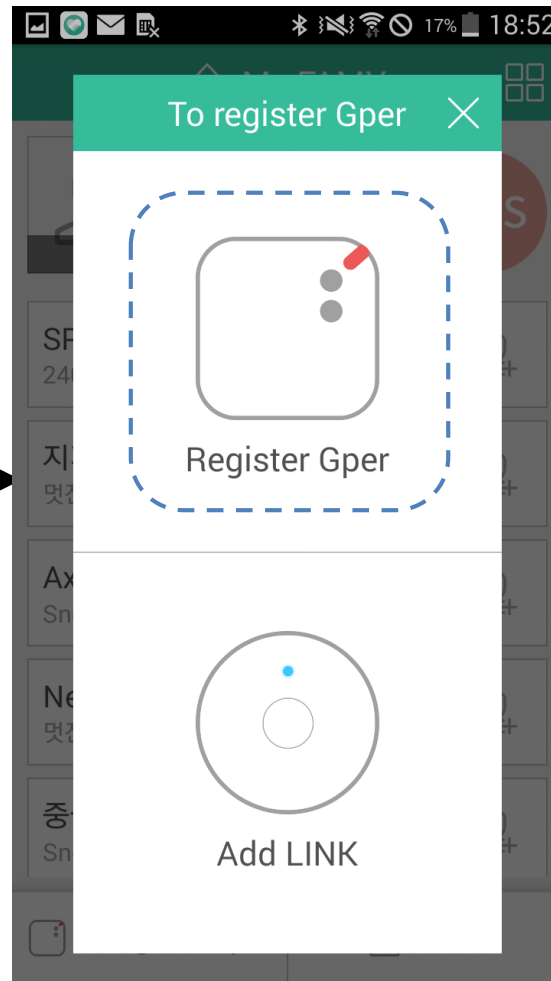


Select "Register Gper"

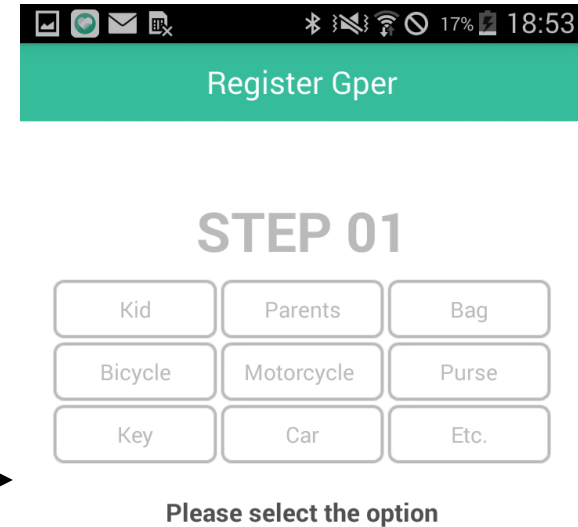

Select the option

Registering Gper on FAMY 2.



STEP 02



Please turn on Gper. LED will flash in red for 2 seconds.

Turn Gper on


STEP 03



Please hold switch and F button for 2 seconds. LED will flash in red and blue.

Press and hold Switch and F buttons for 2seconds

STEP 04




Searching for Gper...

Place Gper on the line and select the most strongest signal.
Give attention to if there are more than two LINKs show

Searching for Gper


Registering Gper on FAMY 3.



STEP 04

A screenshot of the application interface for Step 04. It features a dashed rounded rectangle at the top. Below it is a search bar containing a checkmark icon and the text "14559 (SOS:OFF)". To the left and right of the search bar are green circular buttons with white arrows pointing left and right. Below the search bar is a progress indicator consisting of a circle and the text "Searching for Gper...". At the bottom, there is instructional text: "Place Gper on the line and select the most strongest signal. Give attention to if there are more than two LINKs show".


Check Gper number



STEP 05


A screenshot of the application interface for Step 05. It shows a dropdown menu with "New Gper" and a downward arrow. Below it is a text input field labeled "Passwords (optional)". The main text reads: "LINK has been registered. Please enter the passwords. The first LINK added friend can set Passwords." At the bottom is a green rounded button labeled "Done".

Select a group
-Name the Gper
-Set the Password for Gper
(If you like to use Gper within multiple groups, You must set the password.)

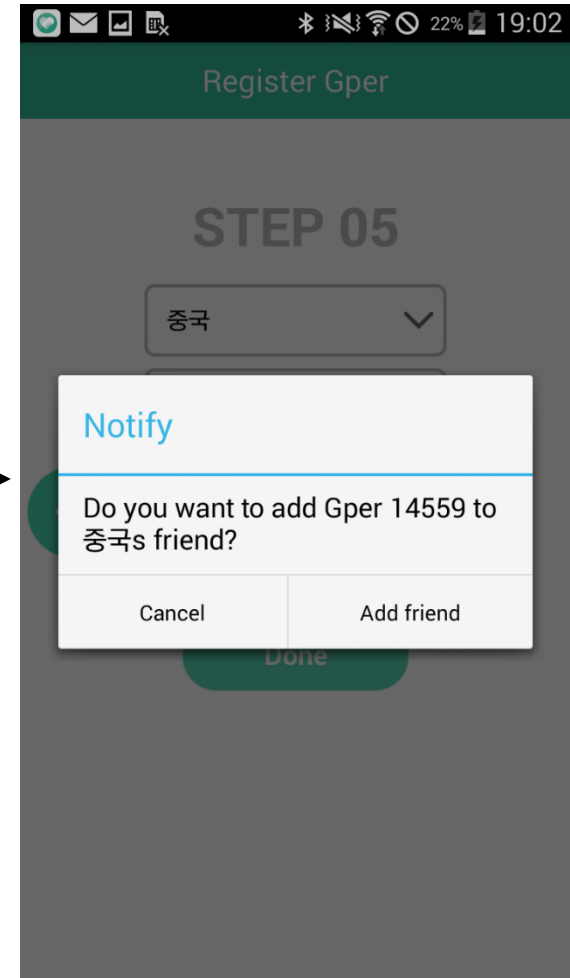


Gper is added to the group
You have selected


Registering Gper on FAMY 4.

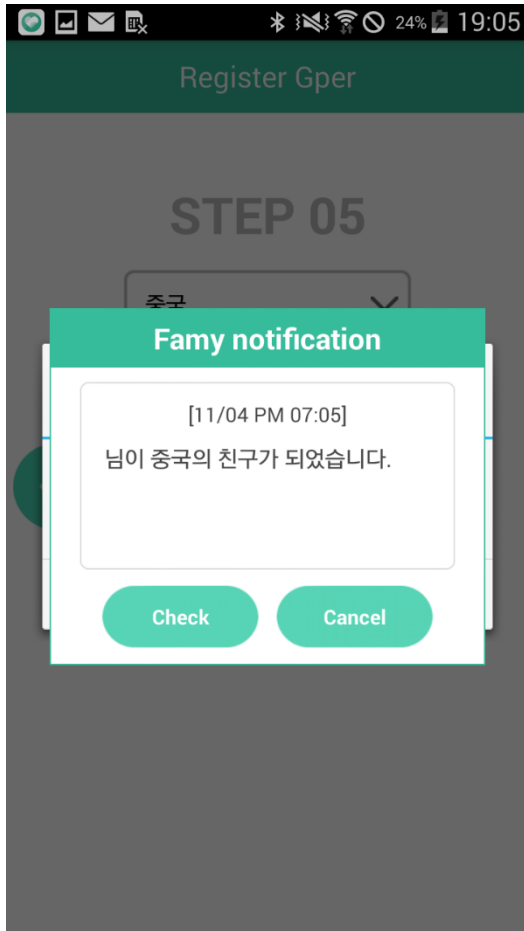

Registration Completed

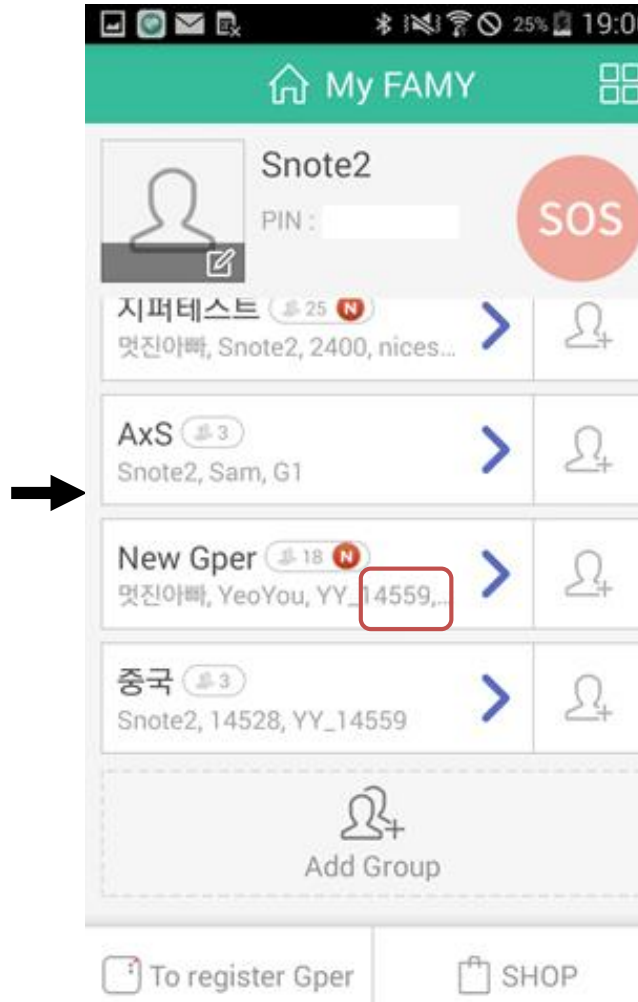


Checking Gper on My FAMY

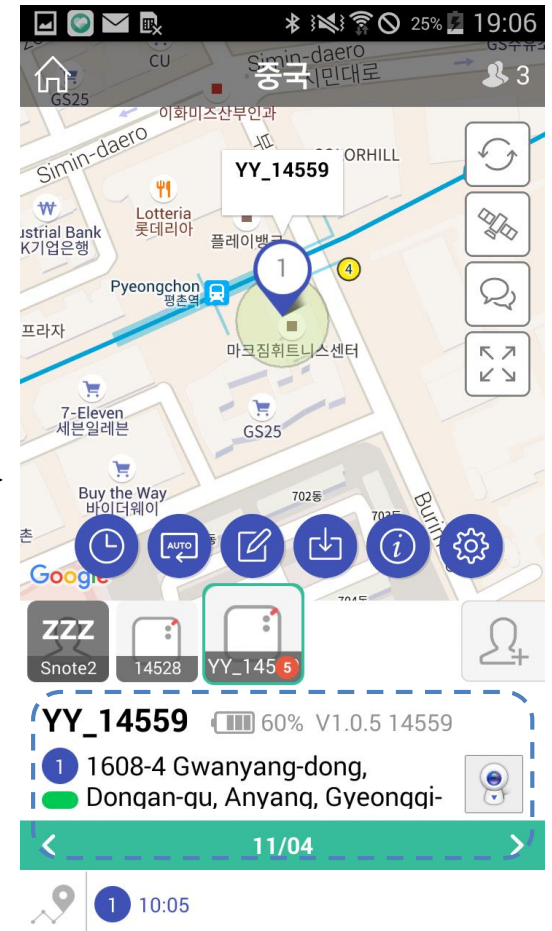

Gper Location

Checking Gper with FAMY App 1.

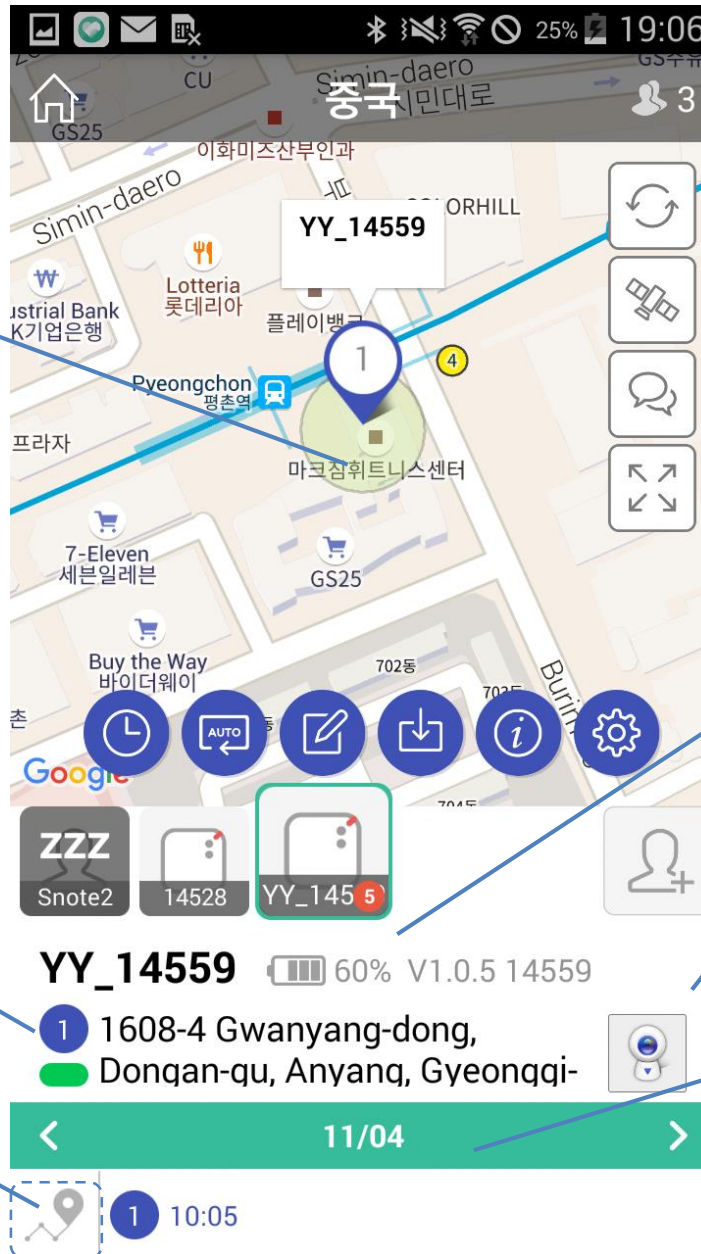

Gper Location



- Refresh
- Satellite
- Chat messenger
- Enlarge the map

Gper's location Address

YY_14559 60% V1.0.5 14559
1 1608-4 Gwanyang-dong,
Donqan-qu, Anyang, Gyeonggi-


Gper Location History

Gper Status: Battery/Version

Street View

Dates: 10days of History

Checking Gper with FAMY App 2.

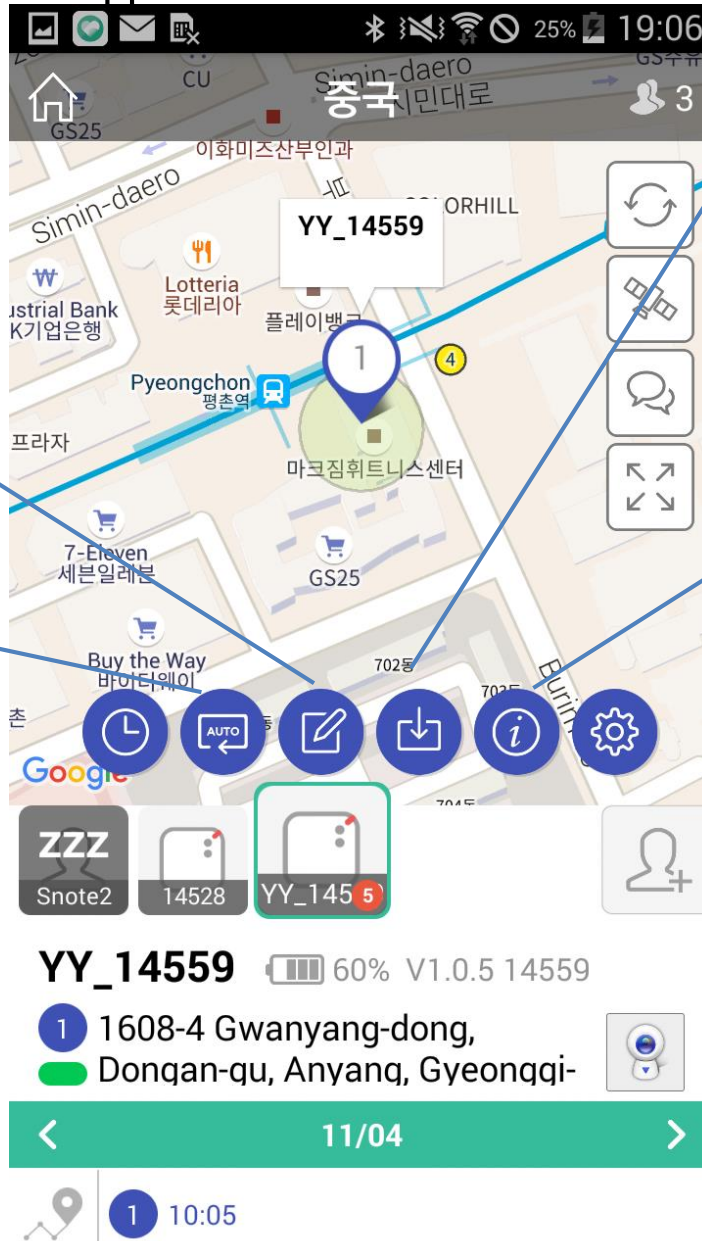

Gper Profile Edit:
Name/Pictures/
Status

Auto Alerts:
Set the time for
location auto alerts

**Downloading
Location History**

